



# TECHNICAL DATA SHEET # 40

## H-17 HANGER ROD INSTALLATION INSTRUCTIONS

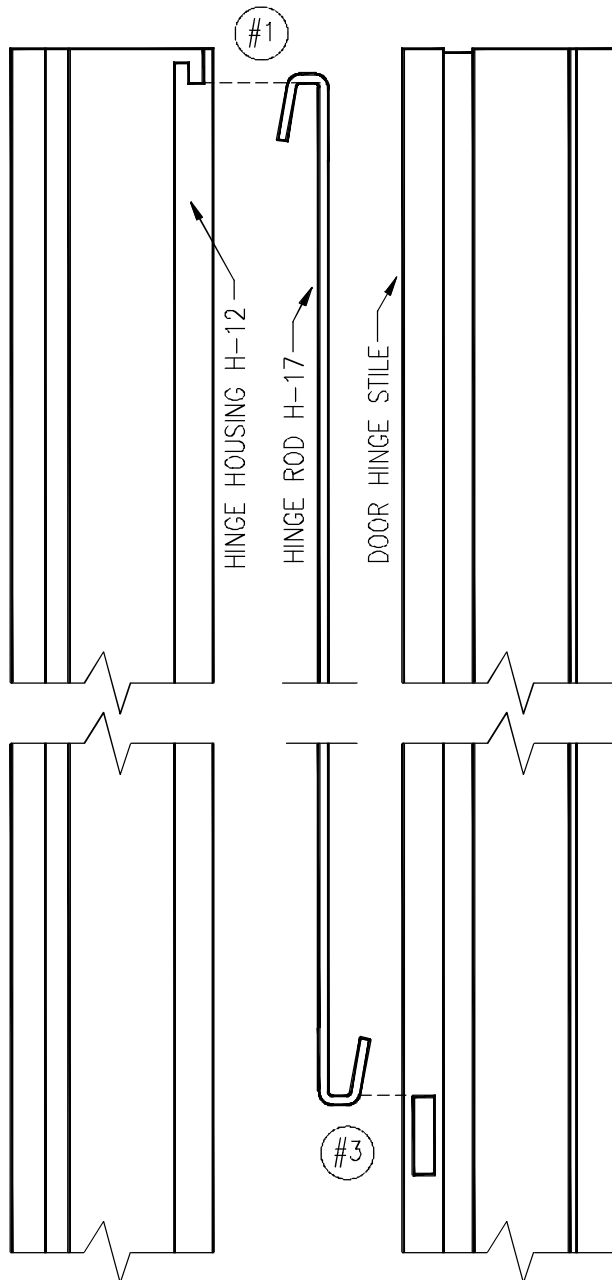

#1 ENGAGE THE HANGER POD IN THE SLOT IN THE HINGE HOUSING, H12 AS SHOWN.


#2 WITH THE DOOR IN THE POSITION AS SHOWN, TILT THE TOP OF THE DOOP AWAY FROM THE HINGE JAMB TO RAISE THE HINGE STILE.

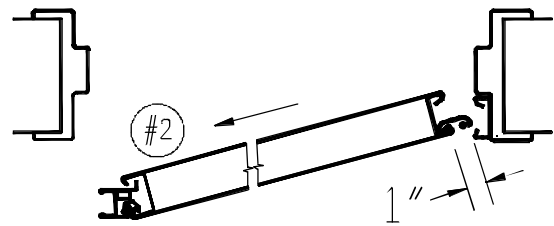

#3 ENGAGE THE HANGER POD IN THE DOOR BODY AND GENTLY LOWER DOOR BODY ONTO HANGER ROD. \*DO NOT DROP DOOR ON HANGER ROD. DOING SO, CAN CAUSE HANGER ROD FAILURE.

\*WHEN PERFORMING THE ABOVE STEPS, DO NOT PULL DOOR AWAY FROM THE JAMB BY MORE THAN 6". DOING SO, CAN CAUSE HANGER ROD FAILURE.

\*DO NOT OPEN UP THE HOOK. THIS WILL CAUSE THE HANGER ROD TO FAIL

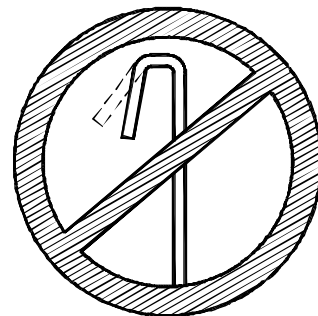

NOTE: IF REPLACING H-17 WITH H-50  
HINGE HOUSING H-12 AND HINGE H-13  
MUST BE REPLACED