


TECHNICAL DATA SHEET # 2A 01

PAIRS OF DOORS – HEAD STRIKE WEATHER SEALING

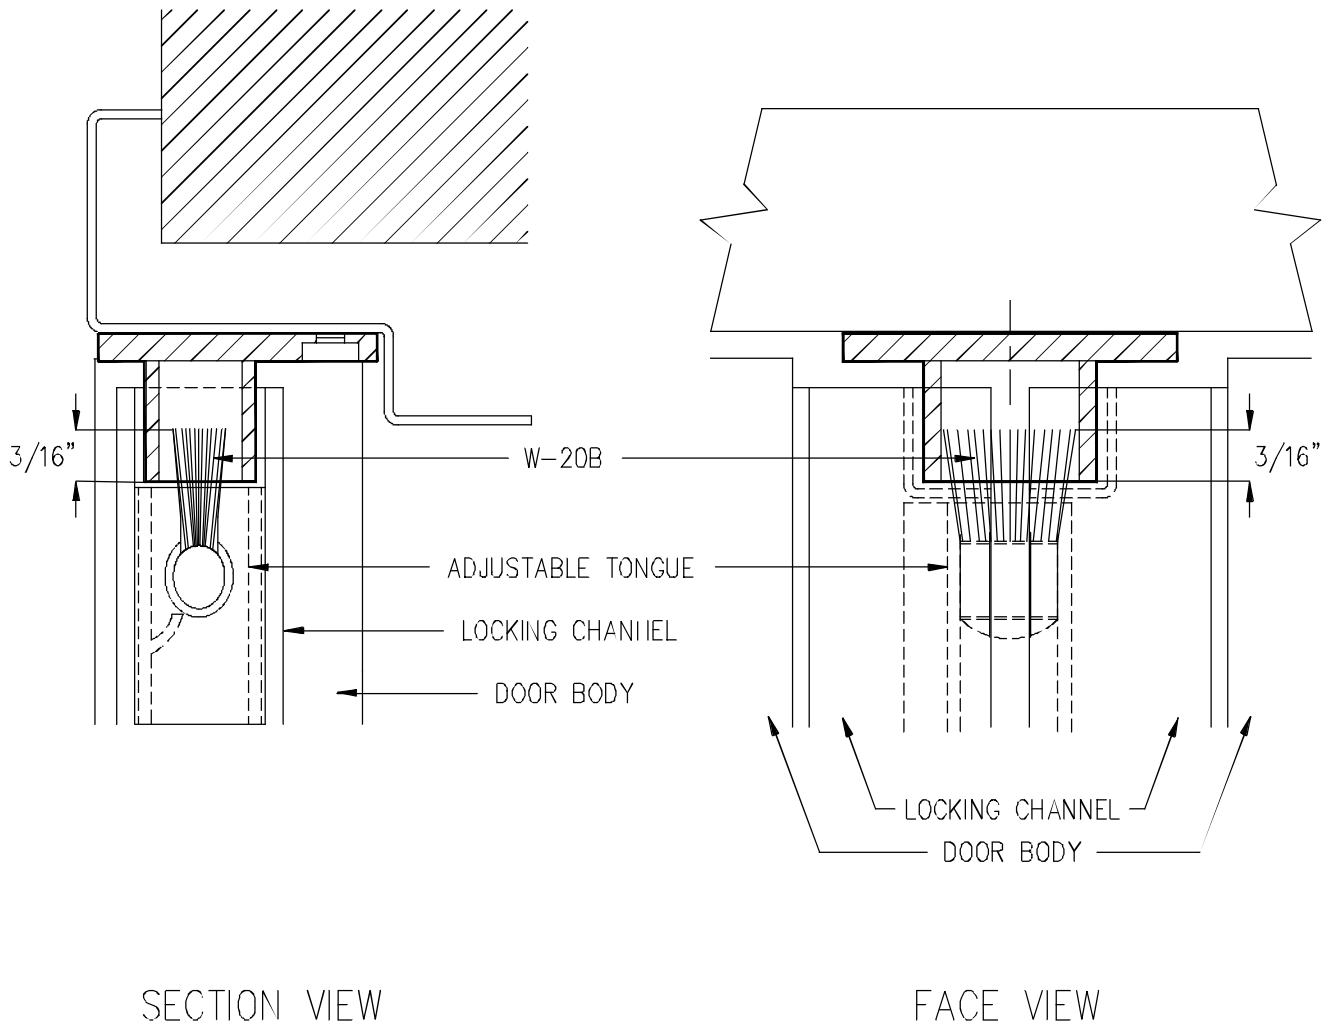

AFTER MOUNTING THE DOORS AND HEAD STRIKE ACCORDING TO TDS#2, INSTALL THE WEATHER SEAL W-20B INTO THE STIFFENER TUBE OF THE ADJUSTABLE TONGUE. CLOSE DOOR TO TEST FIT. CUT BRUSH FOR A 3/16" PROJECTION UP IN THE CENTER OF HEAD STRIKE. ONCE FIT IS CORRECT, REMOVE AND ADD SILICONE TO THE BASE AND RE-INSERT BACK INTO STIFFENER TUBE TO SECURE.



Total Door SYSTEMS™
Global Leader in Integrated Access Technology™

TEL. (800) 852-6660
www.totaldoor.com
© Total Door 2015

FILE NAME
TDS2A-01
DATE 8/10/15