
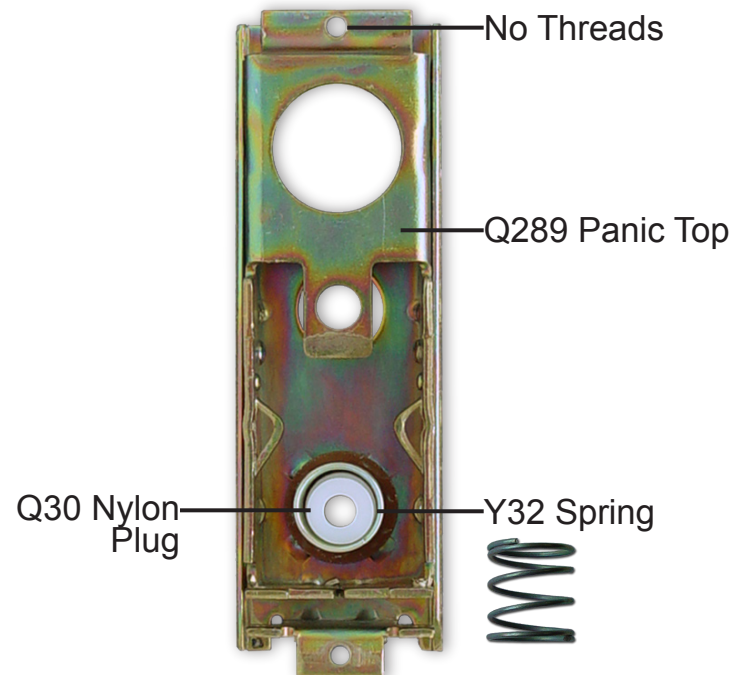


Required Parts

- 1 - Q289 Presetup LR (threaded)*
- 1 - X24 Set Screw
- 1 - Q17PAN Panic Actuator
- 1 - X21 Lever Screw
- 1 - X41 Starlock Washer
- 1 - Y12 Roll Pin
- 1 - Q11 Clutch Housing Complete w/ 2 X49 Set Screws
- 1 - Y22 Spring
- 1 - Q15 Cam
- 1 - Y34 Snap Ring
- 1 - Q14 Turn Piece
- 1 - Q289 Panic Top w/ Y32 Spring
- 1 - LO Escutcheon

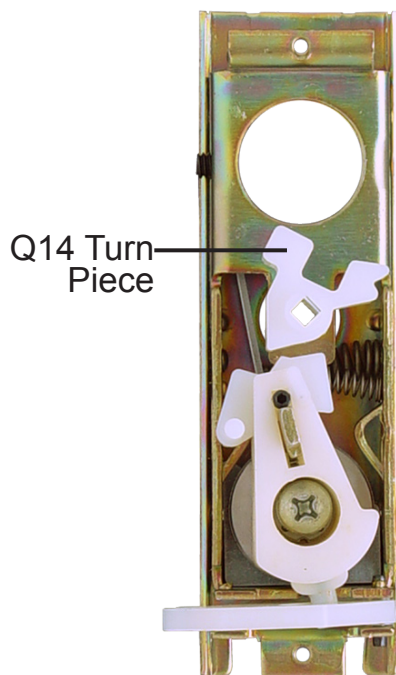

**LP01 LR
Setup**

*For Presetup assembly, visit www.totaldoor.com