


- ### Required Parts
- 1 - Q289 EL LR Presetup (threaded)*
 - 1 - Q17PAN Panic Actuator
 - 1 - Y12 Roll Pin
 - 1- X21 Lever Screws
 - 1 - X41 Starlock Washer
 - 1 - Q11Clutch Housing w/ Q12A Single Dog
 - 1 - Y22 Spring
 - 1 - Q15EL Cam for Z-wire
 - 1 - Y34 Snap Ring
 - 1 - Q14EL RH Turn Piece
 - 1 - Q289 Panic Top w/ Y32 Spring
 - 2 - X24 Set Screws
 - 1 - LCO Escutcheon (Pull)

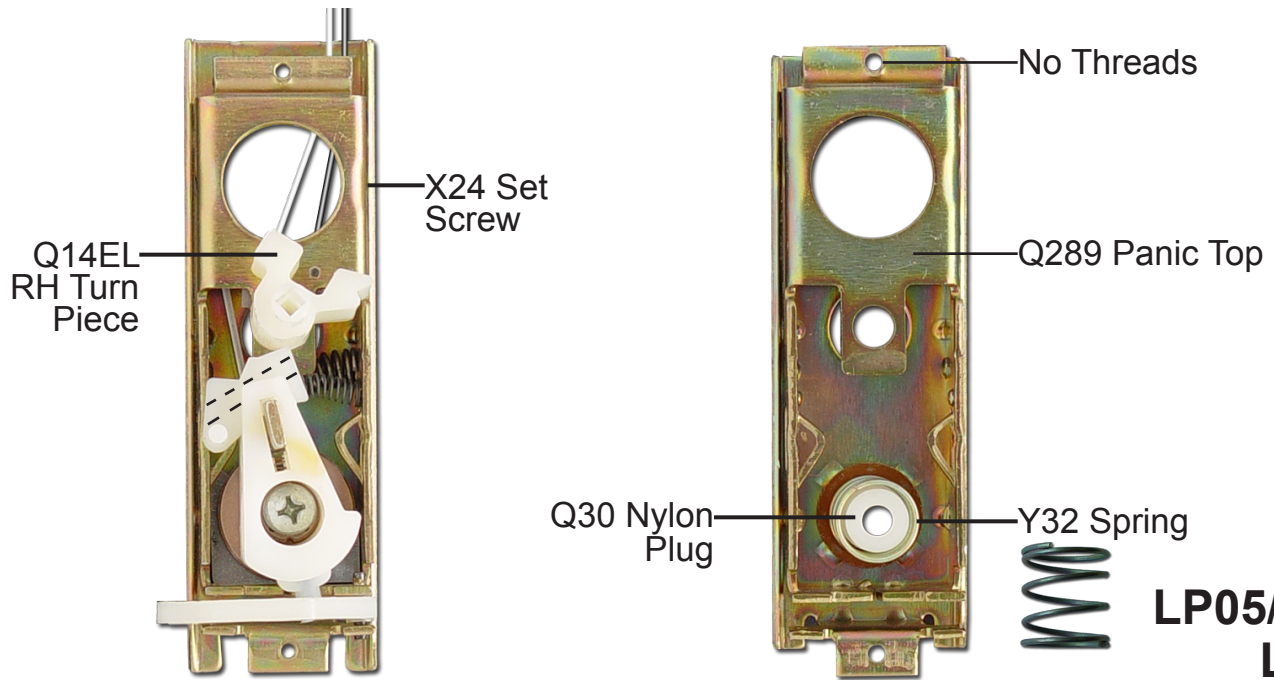

**LP05/07 E-Saf
LR Setup**

*For Presetup assembly, visit www.totaldoor.com