


Required Parts

- 1 - Q289 EL RR Presetup (threaded)*
- 1 - Q17PAN Panic Actuator
- 1 - Y12 Roll Pin
- 1- X21 Lever Screws
- 1 - X41 Starlock Washer
- 1 - Q11Clutch Housing w/ Q12A Single Dog
- 1 - Y22 Spring
- 1 - Q15EL Cam for Z-wire
- 1 - Y34 Snap Ring
- 1 - Q14EL LH Turn Piece
- 1 - Q289 Panic Top w/ Y32 Spring
- 2 - X24 Set Screws
- 1 - LCO Escutcheon (Pull)

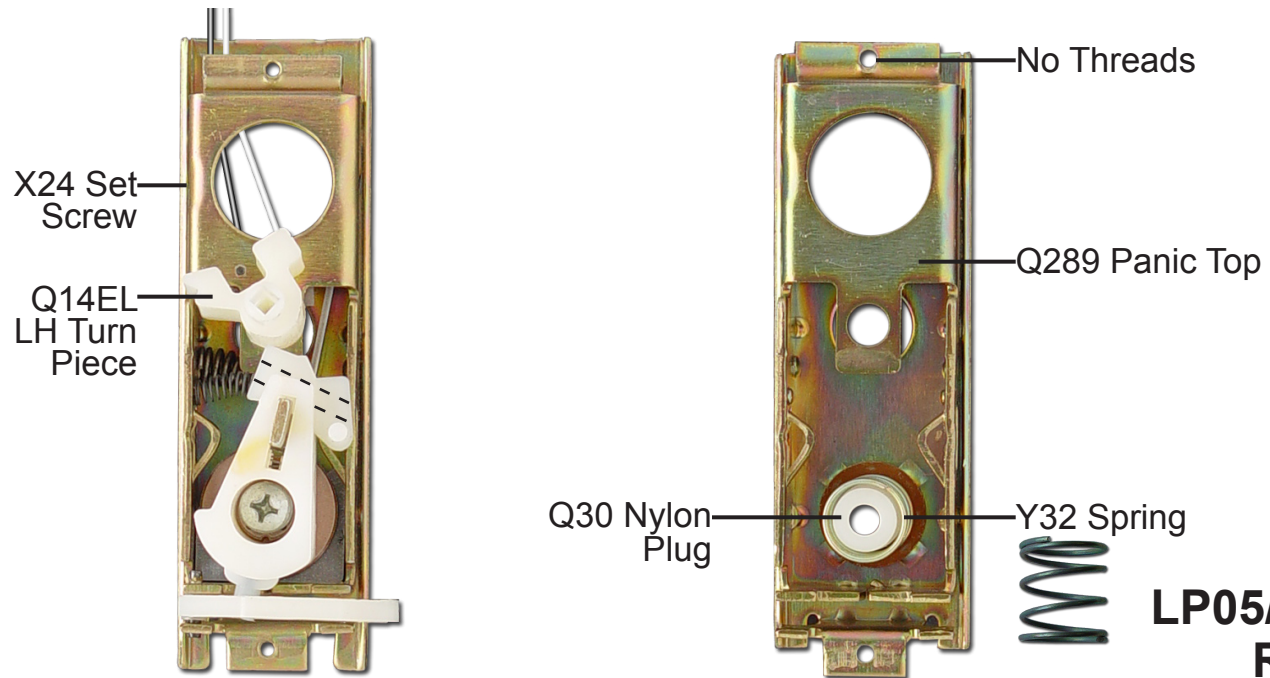

**LP05/07 E-Saf
RR Setup**

*For Presetup assembly, visit www.totaldoor.com