



Required Parts

- 1 Q289 Presetup LR (threaded)*
- 1 Q17 Actuator
- 1 Y12 Roll Pin
- 1 Y22 Spring (attached to clutch housing)
- 1 Q11 Clutch Housing Complete
- 1 Q15 EL Cam (for Z-wire)
- 1 Y34 Snap Ring
- 1 Q14 Turn Piece
- 3 X24 Set Screws (complete)
- 1 LO Access Plate (Push)
- 1 LCO Escutcheon (Pull)

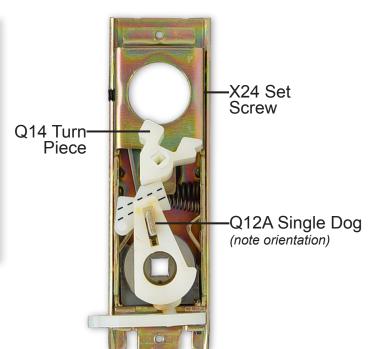

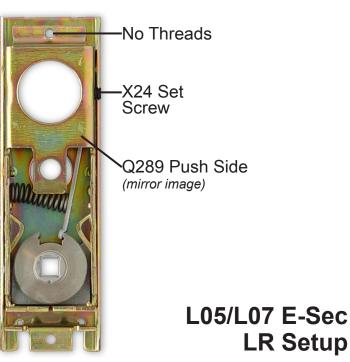

*For Presetup assembly, visit www.totaldoor.com