


Required Parts

- 1 - Q289 Presetup RH (no threads)*
- 1 - Q17 Actuator
- 1 - Y12 Roll Pin
- 1 - Y22 Spring (attached to clutch housing)
- 1 - Q11 Clutch Housing Complete
- 1 - Q15 EL Cam (for Z-wire)
- 1 - Y34 Snap Ring
- 1 - Q14 Turn Piece
- 3 - X24 Set Screws (complete)
- 1 - LO Access Plate (Pull)
- 1 - LCO Escutcheon (Push)

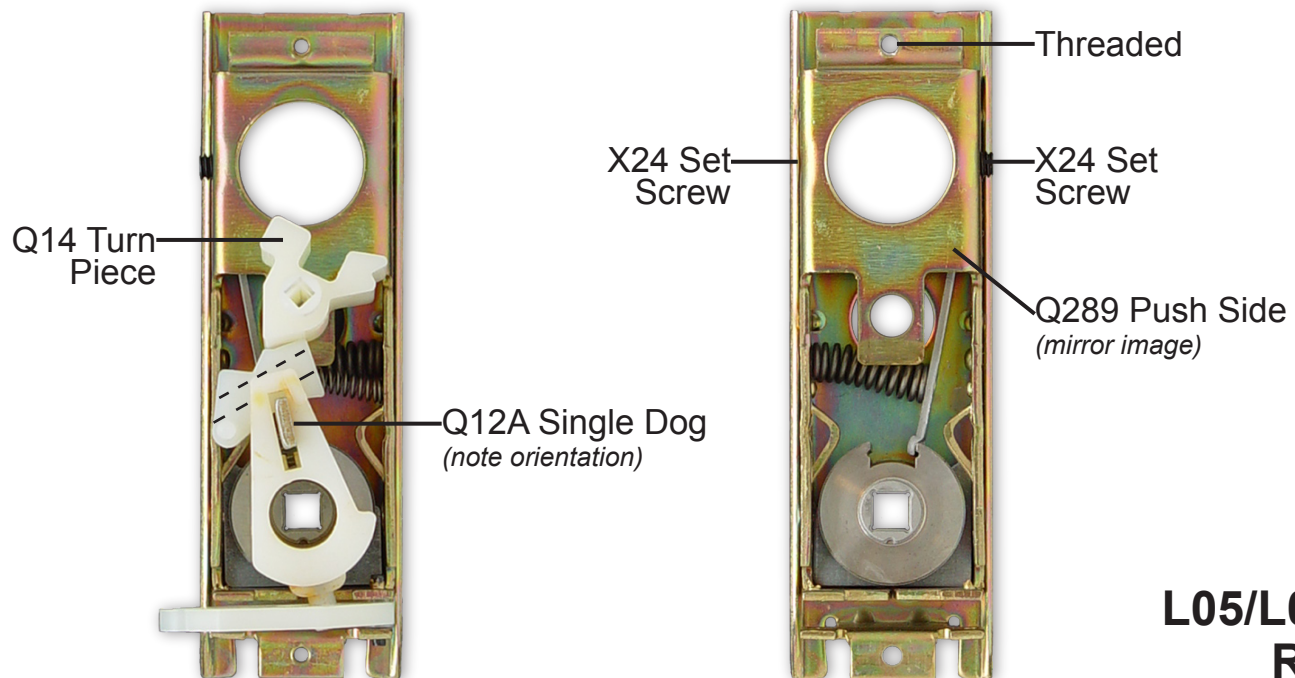

**L05/L07 E-Sec
RH Setup**

*For Presetup assembly,
visit www.totaldoor.com