


Required Parts

- 1 - Q289 Presetup RR (threaded)*
- 1 - Q17PAN Panic Actuator
- 1 - X21 Lever Screw
- 1 - X41 Starlock Washer
- 1 - Q11 Clutch Housing Complete
- 1 - Y12 Roll Pin
- 1 - Y22 Spring
- 2 - X24 Set Screws (complete)
- 1 - Q15 EL Cam (for Z-wire)
- 1 - Y34 Snap Ring
- 1 - Q14 Turn Piece
- 1 - Q289 Panic Top w/ Y32 Spring
- 1-LCO Escutcheon

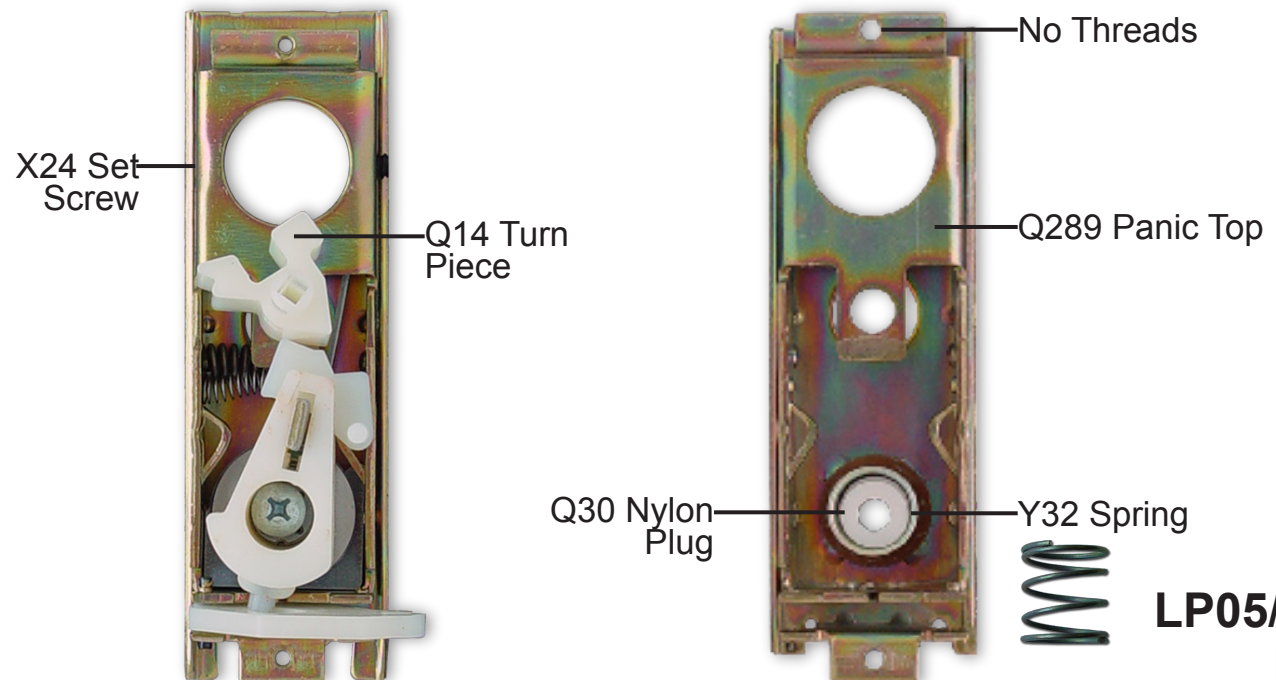

*For Presetup assembly, visit www.totaldoor.com

**LP05/07 E-Sec
RR Setup**