


## Required Parts

- 1 Q289 Presetup LR (threaded)\*
- 1 Q17 Actuator
- 1 Y12 Roll Pin
- 1 Y22 Spring (attached to clutch housing)
- 1 Q11 Clutch Housing Complete
- 1 Q15 Cam
- 1 Y34 Snap Ring
- 1 Q14 Turn Piece
- 4 X24 Set Screws (complete)
- 1 LCS Escutcheon (Push)
- 1 LCO Escutcheon (Pull)

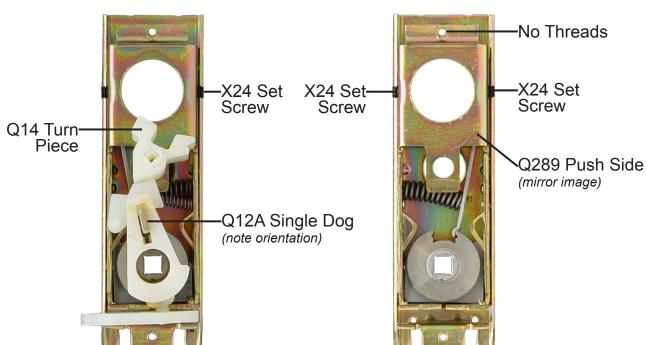

\*For Presetup assembly, visit www.totaldoor.com

L09 LR Setup