


**HEAD PROFILE** 

JAMB PROFILE

NOTE: SAFEFRAME BY TOTAL DOOR

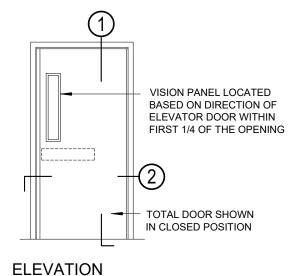


1

## VERTICAL SECTION

NOT TO SCALE

NOT TO SCALE

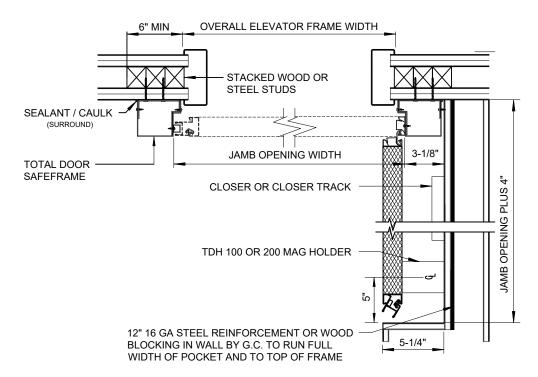



JAMB WIDTH = OVERALL ELEVATOR FRAME WIDTH + 2"

JAMB HEIGHT = OVERALL ELEVATOR FRAME HEIGHT + 1"

www.totaldoor.com 800-852-6660

Copyright 2023 Total Door

Sheet No: ES-HO-90-RR-TDWMF