


**HEAD PROFILE** 

JAMB PROFILE

NOTE: SAFEFRAME BY TOTAL DOOR

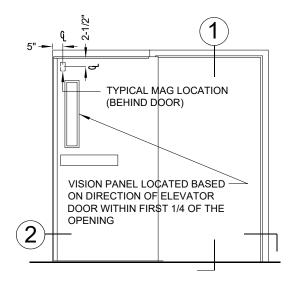


## (1)

## VERTICAL SECTION

NOT TO SCALE

## **ELEVATION**

NOT TO SCALE

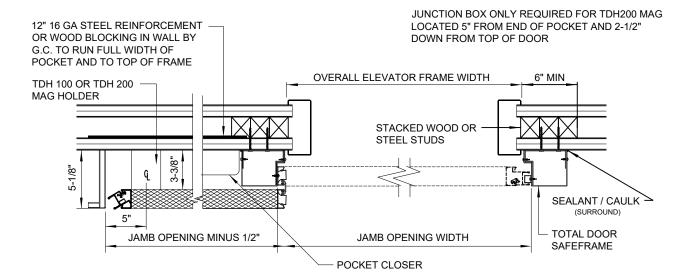



JAMB WIDTH = OVERALL ELEVATOR FRAME WIDTH + 2" JAMB HEIGHT = OVERALL ELEVATOR FRAME HEIGHT + 1"

www.totaldoor.com 800-852-6660 Copyright 2021 Total Door

Sheet No: ES-HO-180-LR-TDWMF