


HEAD PROFILE

JAMB PROFILE

NOTE: SAFEFRAME BY TOTAL DOOR



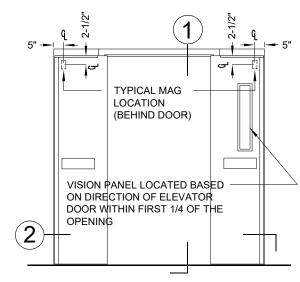


VERTICAL SECTION

NOT TO SCALE

ELEVATION

NOT TO SCALE

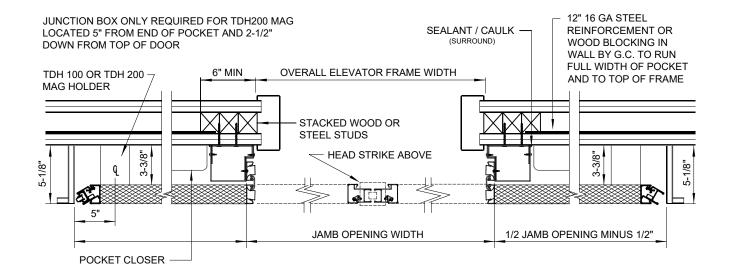



JAMB WIDTH = OVERALL ELEVATOR FRAME WIDTH + 2"
JAMB HEIGHT = OVERALL ELEVATOR FRAME HEIGHT + 1"

www.totaldoor.com 800-852-6660 Copyrigh

Copyright 2021 Total Door

Sheet No: ES-HO-180-PR-TDWMF