
Remove the upper and lower allen screws on the hinge-side of the panic with a **Y33 allen wrench**.




Continued from **STEP 1**.

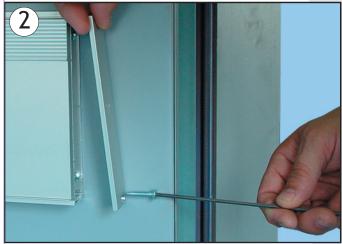

Use caution when sliding the panic bar to expose the lock mechanism. The panic button will pop out.

# Installation Lever and Cylinder

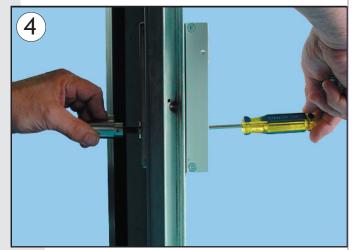

Insert lever handle as shown.



Secure the handle by tightening the phillip screw located inside the lock body.



To install the cylinder, loosen the bottom phillips screw 3 TURNS.



Loosen the top phillips screw 6 TURNS.



The lock should loosen enough to access the cylinder set screws as shown in **STEPS 8 & 9**.

## Installation Lever and Cylinder



Loosen the set screws to install your cylinder.




Screw in the cylinder which should have a standard **B Cam**.



Tighten the allen set screws on both sides of the lock.



Tighten the top screw of the lock.

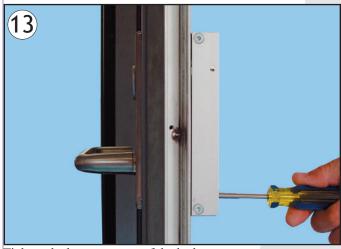

Tighten the bottom screw of the lock.

## Installation Lever and Cylinder



Insert the panic button as shown in inset picture. Slide the bar over.



Reinstall end caps and screws.

