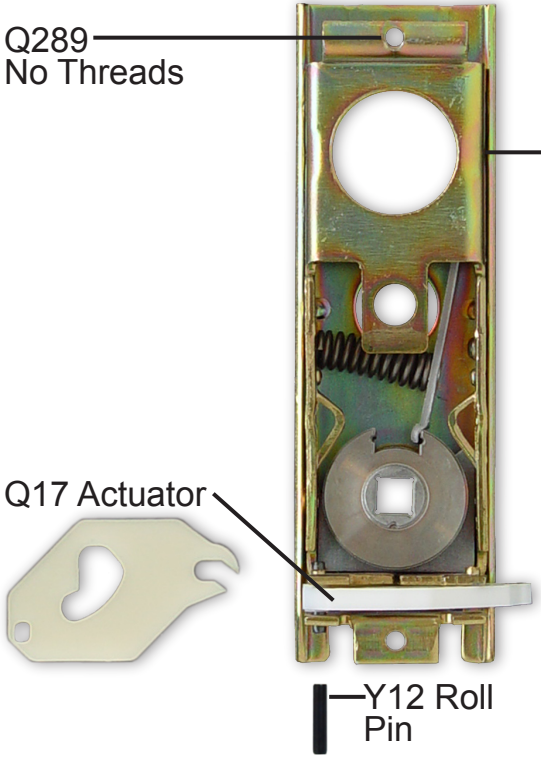

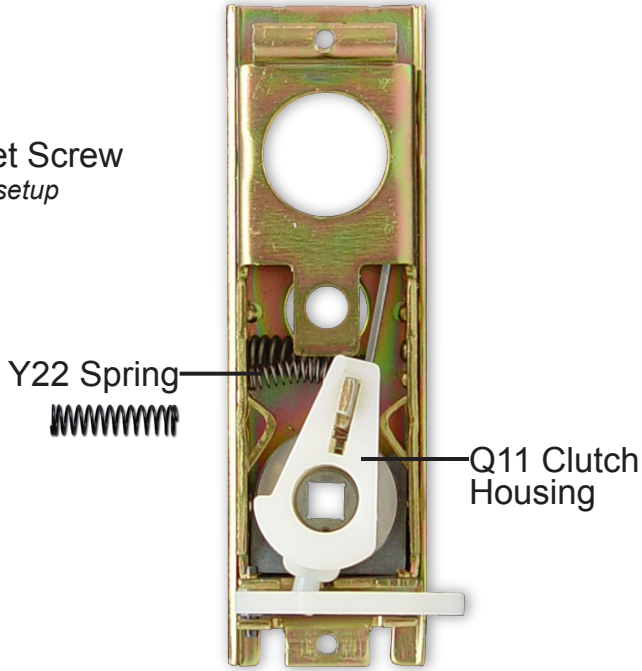

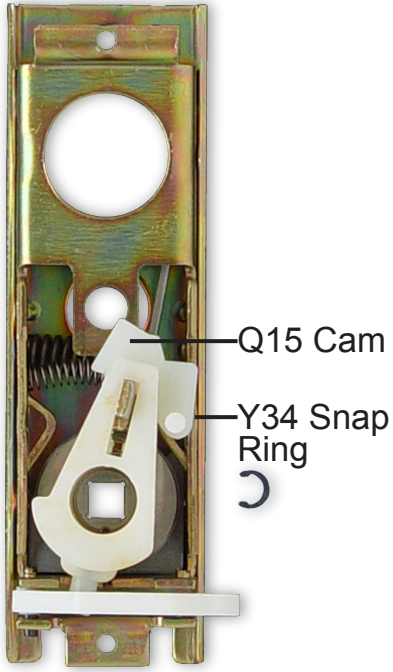

Required Parts

1 - Q289 Presetup LH (no threads)*
1 - Q17 Actuator
1 - Y12 Roll Pin
1 - Y22 Spring (attached to clutch housing)
1 - Q11 Clutch Housing Complete
1 - Q15 Cam
1 - Y34 Snap Ring
1 - Q14 Turn Piece
2 - X24 Set Screws (complete)
2 - LO Escutcheons

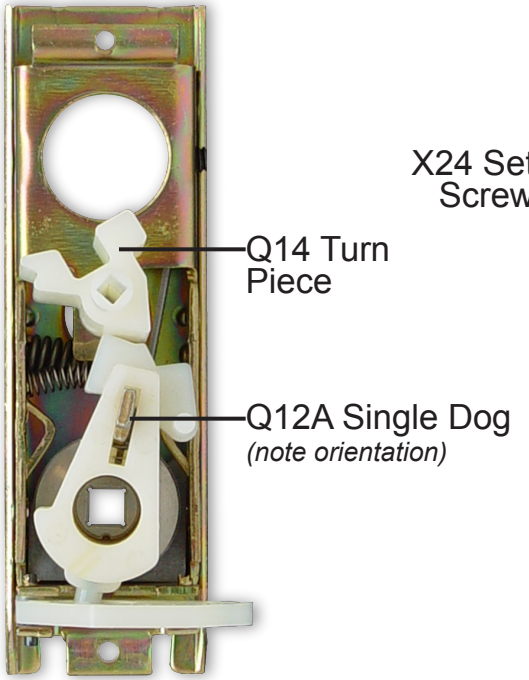

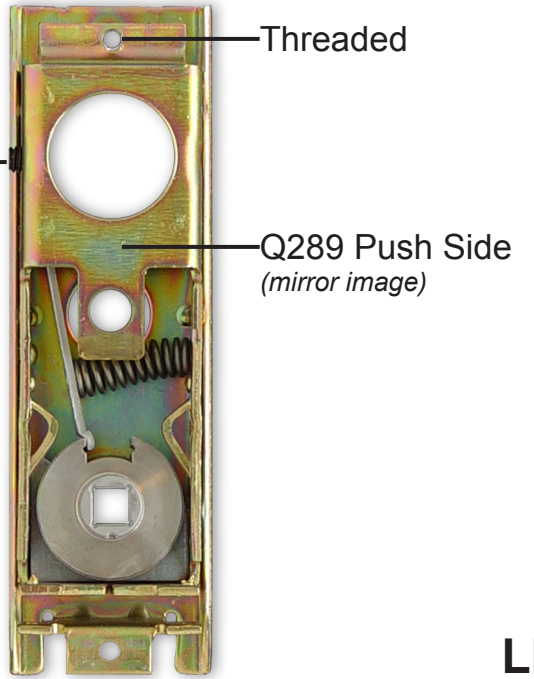

*For Presetup assembly,
visit www.totaldoor.com

L01.5
LH Setup